TECHNO CLEAN

Floor Care Re-defined

Multi-mop

Handy Deep Cleaning Scrubber Machine...

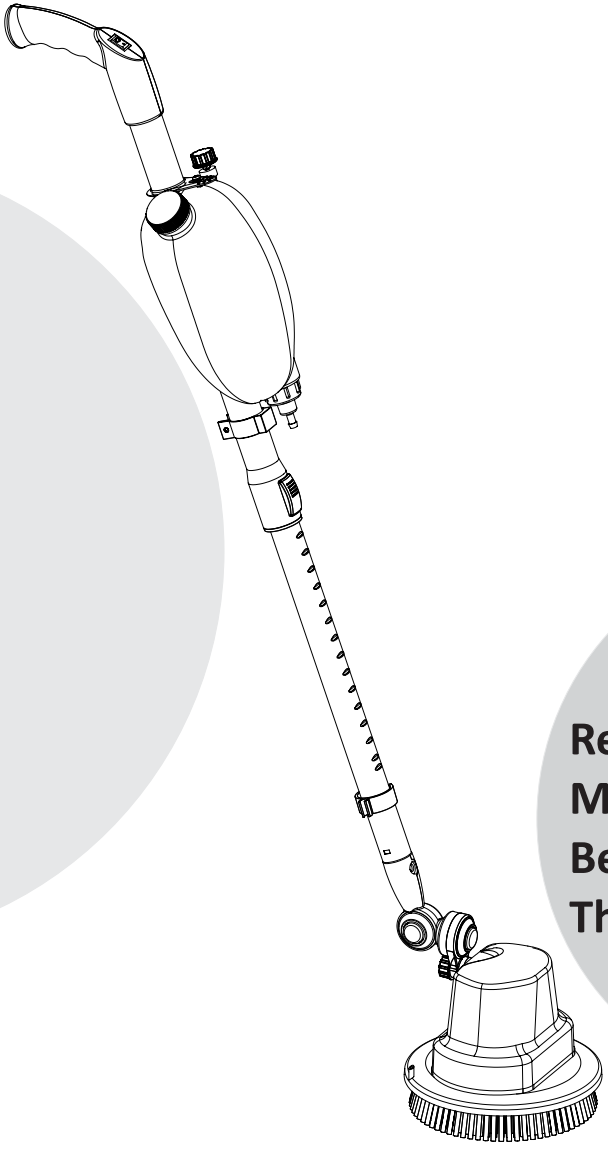

Read Owners Manual Carefully Before Using The Machine

Contents of the box

S No.	Part Name	Qty. Nos.
1	Machine Handle Large	1
2	Machine Head	1
3	Small Handle	1
4	Power Supply (DC)	1
5	Hard Brush	1
6	Soft Brush	1
7	Silicone Carbide Brush	1
8	Super Dusting Brush	1
9	Pad Holder	1
10	Red Pad	1
11	White Pad	1
12	Micro Fibre Pad	1
13	Foam Bottle	1
14	Owners Manual	1
15	Battery (Optional)	1

Congratulations!
Technoclean greets you for becoming a proud owner of Multi-Mop, a Handy and Multi Featured Deep Cleaning Scrubber Machine.

Thank you and wishing you years of happiness of using Multi-Mop.

TECHNOCLEAN

INDEX

1.	DO'S AND DON'TS	01
2.	REGULAR MAINTENANCE PROCEDURE	01
3.	UNBOX THE MACHINE	02
4.	FIXING BRUSH/ PAD	02
5.	ADJUSTING THE MACHINE	03
6.	FILLING WATER	03
7.	CONNECTING POWER SUPPLY	04
8.	START USING	04
9.	HANDY OPERATION	05
10.	TO DISCONNECT	05
11.	FOR DETACHING THE BRUSH/ PAD	05
12.	USING BATTERY	06
13.	TYPE OF BRUSH/ PAD AND THEIR APPLICATIONS	07
14	TROUBLESHOOTING TABLE	08
15	WARRANTY	09
16	TERMS & CONDITIONS FOR WARRANTY	09
17	TECHNICAL SPECIFICATIONS	10

1. DO'S AND DON'TS

1) **Do not operate machine:**
   - Unless you have read owners manual.
   - With a damaged cord or plug.
   - If not in proper operating condition.
   - In standing water.
2) **When using machine:**
   - Do not run the machine over the cord.
   - Do not pull the machine by the cord or plug.
   - Do not pull the cord around sharp edges or corners.
   - Do not handle the power supply plug with wet hands.
   - Keep the cord away from heated surfaces.
   - Report machine damage or faulty operations immediately.
3) **Before leaving machine:**
   - Turn off the machine.
   - Unplug the cord from the outlet.
4) **When servicing machine:**
   - Unplug the cord from outlet.
   - Use manufacturer supplied or approved replacement parts.

2. REGULAR MAINTENANCE PROCEDURE

To keep the machine performing well for more time, please follow the following maintenance procedures:

- Unplug machine as soon as you are done using it.
- Detach or remove pad driver/ brush, never park it with attached brush, as the brush will loose its shape and give trouble later when operating.
- Use a mild cleaner to clean the exterior of the machine.
- Check power cord for any damage. If any damage is detected, replace the cord immediately.

3. UNBOX THE MACHINE

- Remove the Handle and the Machine Head from the box.
- Unscrew the knob provided in the Head and insert the Handle slot in the bolt/ stud sneaking out from the Head.
- Securely tighten the knob back on the bolt/ stud to ensure it is not loose.
- Now connect output DC pin from handle to DC socket in Head.
- Connect water pipe from Handle to the Head.

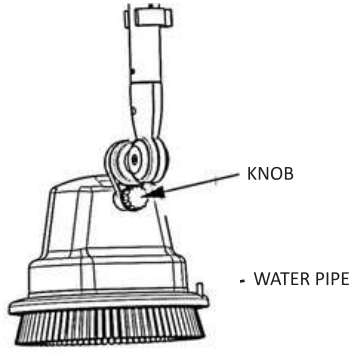

4. FIXING BRUSH/ PAD

- Place the appropriate brush according to the application needs, such as Hard/ Soft/ Silicon Carbide Brush or a Pad Driver with suitable pad.
- Match any two slots in the brush with two white colour locks in the head & press to lock (Click Sound).
- Make Sure both locks are properly engaged otherwise brush may dismount and cause damage.
- If you Intend to use a pad for any purpose, begin by attaching the pad holder to the head and then fix desired pad on the Velcro side of pad holder.
- Ensure the pad is fixed at the center of the pad holder.
- The pad will easily stick to Velcro side and is now ready for use.

5. ADJUSTING THE MACHINE

- Adjust the pole height by slide push switch. Push the switch downwards, hold and pull the pipe to suitable length then release the switch to lock at that position.

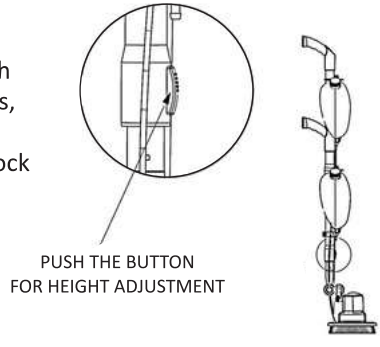

- Adjust the Handle inclination to suit your requirement.

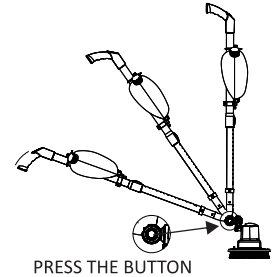

- **Rotate Head according to the surface to be cleaned.**

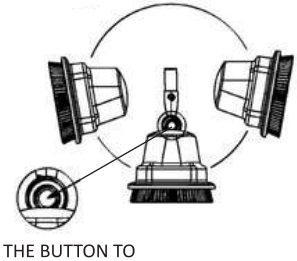

6. FILLING WATER

- Open the Tank Cap and fill suitable diluted detergent water into tank then securely close the cap.

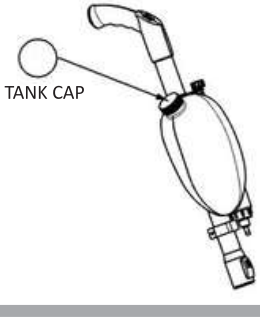

7. CONNECTING POWER SUPPLY

- Take the Retractable cable DC Power Supply (12V DC), pull-out suitable length of wire from retractable drum.
- Then plug in the DC Connector into Handle DC Socket as marked mating point and rotate to right to lock (click sound).
- Make sure the slider lock is on top of handle position.
- Connect the AC supply by inserting 2-Pin Plug into the Socket and turn main supply ON.
- The Red LED will glow, indicating now your machine is ready for use.
- Turn ON the machine by pressing the switch which is fitted on top of the Handle.
- Now the Brush/ Pad starts to rotate, move the machine by controlling handle UP/ DOWN slightly.

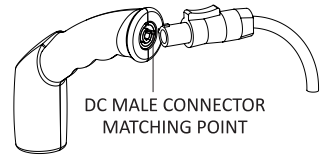

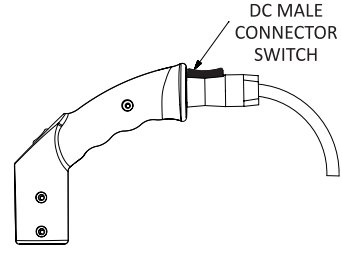

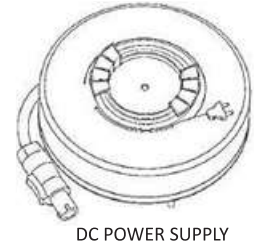
DC POWER SUPPLY

8. START USING

- Turn on the Water supply by rotating the knob to the ON position.
- Water will begin flowing on the brush, once an adequate amount has been dispensed, rotate the knob back to the OFF position.
- Start the machine to clean the floor, scrubbing for appropriate duration based on the level of dirtiness.
- Remove the waste water from floor by wiper/ mop.

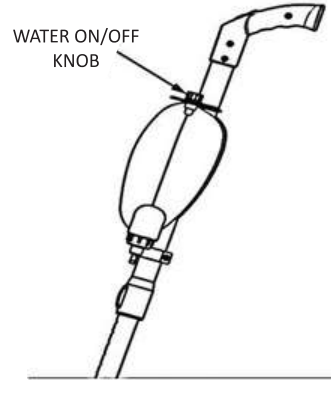

9. HANDY OPERATION

- To operate the machine with the short handle just unscrew the knob.
- Pull out the long handle and attach short handle then securely tighten the knob back on to the bolt.

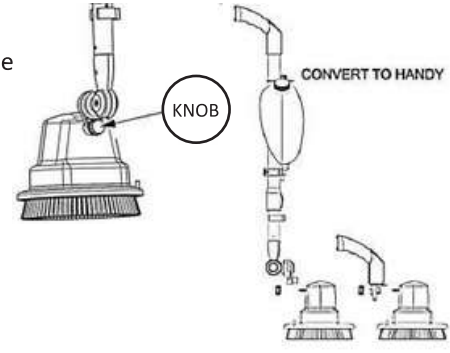

10. DISCONNECT POWER SUPPLY

- To disconnect power supply from machine's DC Socket, pull the spring lock using thumb then turn it to the left and pull out the DC Connector.

11. DETACHING BRUSH

- For Detaching the Brush/ Pad just press and hold the white lock clips with two fingers and then with the other hand pull the Brush/ Pad to detach.
- Alternatively, you may detach it easily by gripping one side of the bristles on the brush and pull it outwards.
- Clean the brush and store in the packing box designated slot.

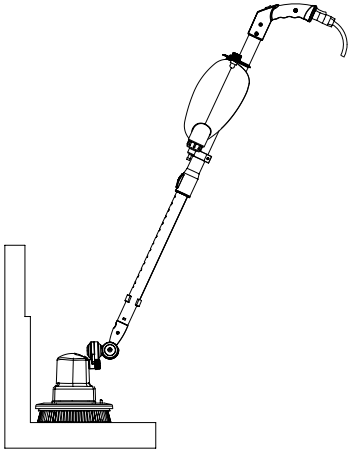

FLOOR SETTING

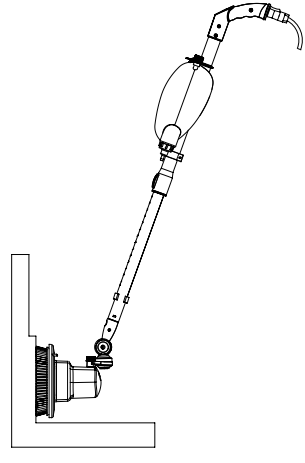

WALL SETTING

12. USING BATTERY *(Optional, if purchased)*

- If a battery is purchased with the machine it includes a Lithium Ion rechargeable battery with following specifications:
  - Capacity 5000 mAh
  - Voltage 12V DC
- Notable features include a Battery Management System (BMS) for monitoring and optimizing performance as well as a Charge Level Indicator for easy tracking of battery capacity.
- The battery is equipped with a male socket for operating the machine and a female socket for the purpose of recharging.
- The battery can be attached to the machine using the Velcro provided in the battery case and the male socket has to be plugged in the machine handle.
- To charge the battery, use the power supply provided with the machine and insert the male connector of power supply into the female connector provided in the battery case. It will take appx. 4 hrs to fully charge the battery. Battery status can be checked by pressing the red button on the indicator panel, all four blue lights indicates a fully charged state.

BATTERY FITTED
WITH THE MACHINE

BATTERY CASE

BATTERY RECHARGING

13. TYPE OF BRUSH/ PAD AND THEIR APPLICATIONS

BRUSH/ PAD	NATURE OF USES	APPLICATIONS
SILICON CARBIDE BRUSH	HARD SCRUBBING	Used for removing old dirt, grease residue, scaling from kitchen & bathroom floors
HARD BRUSH	MEDIUM SCRUBBING	Used for regular cleaning purpose in kitchen, bathroom and hard floors
SOFT BRUSH	GENTLE/ LIGHT SCRUBBING	Used for removing dirt from soft floors, carpets, sofas, and chairs on a regular cleaning basis
SUPER DUSTING BRUSH	REMOVING DRY DUST	Used for removing dry dust from indoor, out door walls & ceilings on regular cleaning basis
PAD HOLDER WITH RED PAD	LIGHT SCRUBBING & POLISH	Used for removing stains from kitchen, bathroom and soft marble floors on regular gentle cleaning basis
PAD HOLDER WITH WHITE PAD	BUFFING ONLY	Used for dry buffing and polishing on all floors, desks and tables
PAD HOLDER WITH MICRO FIBER PAD	SOFT BUFFING	Used for dry buffing & polishing on floors, desks and tables

14. TROUBLESHOOTING TABLE

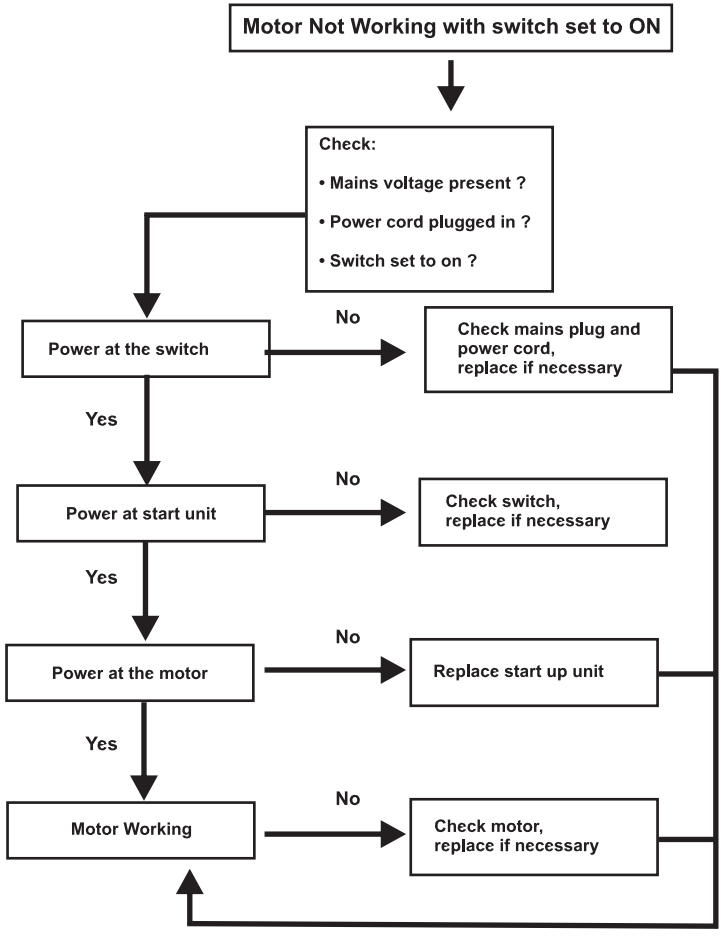

15. WARRANTY

The Company offers one year Replacement Warranty for the product from the date of purchase.

How Warranty Works

The following five operational parts of the machine carry One Year Replacement Warranty:

1. Machine Handle **2. Head**

3. Small Handle **4. Power Supply**

5. Battery

Brushes and pads are consumables and therefore not covered under warranty.

For Any Complaints:

- In case of any issues with the operational components of the machine either register your complaint on our website (the Convenient way) **www.multimop.in** or contact our customer care +91 99908 67700 (10 am - 5 pm, Mon - Sat)
- Our technical team will connect with you to understand the Issue faced (may be on video call if necessary).
- If necessary we will dispatch new part to you via courier to your location and you have to return the old defective part to the courier on reverse pickup. Ensure that old defective part is packed in the same packing box in which new part was sent.

16. TERMS & CONDITIONS FOR WARRANTY:

1. The Company's Liability under the warranty will be limited only to defects that occur under conditions of normal operation and proper usage.
2. It excludes defects occurring because of abuse, fault care or inadequate maintenance, repair/ alternations to goods or parts by unauthorized Individual/ Agencies and the use of electric supply for which the goods are not designed.
3. Any breakage of plastic parts of the equipment is also excluded from warranty coverage.
4. The Customer will have no claim under warranty in respect of any personal injury, damage to property or consequential damages arising from utilization of the goods not in accordance with the user manual.
5. The Company liability under this warranty shall in NO event and under NO circumstances exceed the price paid by the customer to the company for the goods stated in the Invoice.

17. TECHNICAL SPECIFICATIONS

IP PROTECTION CLASS	IPAX4
RATED POWER	60 W
RATED VOLTAGE	12V DC
BRUSH SPEED	200 RPM
BRUSH DIAMETER	8 Inch
WATER TANK CAPACITY	2 Litre
ADJUSTABLE LENGTH	35 - 47 Inch
WEIGHT	2.2 kg
POWER SUPPLY (OUTPUT)	12V DC 10 Amp
POWER SUPPLY CABLE LENGTH	25 Feet
POWER SUPPLY (INPUT)	220V AC/ 50 Hz
GROSS PACK WEIGHT	7.1 kg

Multi-mop

Handy Deep Cleaning Scrubber Machine...

Website QR Code

Youtube Channel QR Code

TECHNO CLEAN

Floor Care Re-defined

TECHNOCLEAN EQUIPMENTS PVT. LTD.
Works : Plot No.02, Udyog Kendra Ext.-1
Ecotech-III, Greater Noida, UP-201 306
E-mail: care@mutimop.in
Customer Care: +91 99908 67700
Web: www.multimop.in